LUMBER PATTERN DATA SHEET
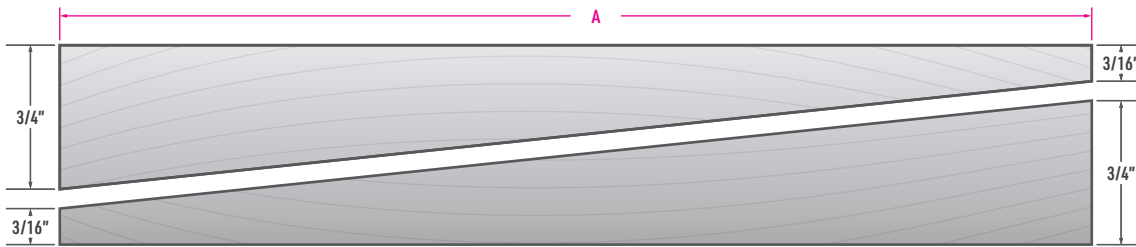## BEVEL LUMBER PATTERNS | *V1.0*

WESTERN WOODS
SINCE 1971

LUMBER PROFILE
1" COLONIAL BEVEL SIDING

*FIND THIS PATTERN IN OUR **LUMBER PATTERN BOOK** ON **PAGE 20***

» **NOTE:** Dimensioned pattern drawings are drawn to scale and presented at 100% unless otherwise indicated.

A

3/16"
3/4"
3/4"
3/16"

SCAN HERE

Get a digital copy of our *Lumber Pattern Book* by scanning the QR Code or by visiting our website at: **westernwoodsinc.com**

PROFILE VIEW
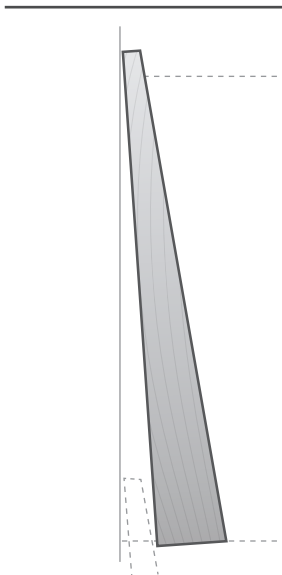
INSTALLED VIEW

SIZE OPTIONS

NOMINAL SIZE	PATTERN NO.	A	B	CONVERSION FACTOR
1 x 6	-	5 $^3/_8$"	4 $^1/_8$"	1.17
1 x 8	-	7 $^1/_8$"	5 $^7/_8$"	1.16
1 x 10	-	9 $^1/_8$"	7 $^7/_8$"	1.13
1 x 12	-	11 $^1/_8$"	9 $^7/_8$"	1.13

LUMBER PATTERN DATA SHEET

BEVEL LUMBER PATTERNS | *V1.0*

WESTERN WOODS
SINCE 1971

ALIGNMENTS

✔ Horizontal
✘ Vertical

NOMINAL SIZES

1/2 x 2	5/8 x 8
1/2 x 4	5/8 x 10
1/2 x 5	3/4 x 6
1/2 x 6	3/4 x 8
	3/4 x 10

NAIL TYPES

BOX NAIL
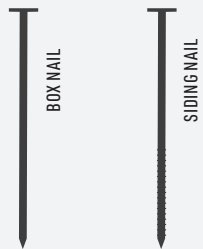
SIDING NAIL

B BOX NAIL - Wide head flat, smooth shaft.

S SIDING NAIL - Wide flat head, ribbed shaft.

! WARNING: Do not nail through any of the over-lapping pieces.

DESCRIPTION

Bevel Patterns include Bungalow or ("Colonial") patterns which are slightly thicker than Bevel. Either pattern can be used with the smooth or saw-faced surface exposed. These patterns provide a traditional-style appearance. When installing, recommend a 1" overlap [1].

NAILING PATTERNS

LEGEND

1 NAILS MUST PENETRATE **1 ¹/₂" INTO SOLID WOOD.**

A ONE **SIDING OR BOX NAILS.** ONE PER BEARING, PLACE **1" FROM BOTTOM EDGE.**

1 POSITION LOWER NAIL **1" FROM THE BOTTOM.** (OVERLAP)

A HOUSE WRAP

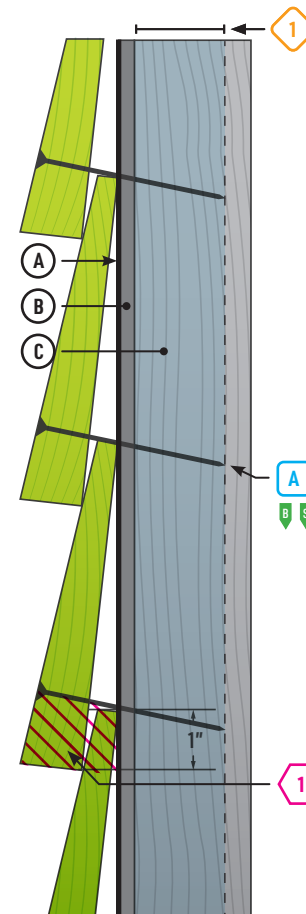B SHEATHING

C STUD

SIDING

NAIL DEPTH

NAIL

PROFILE VIEW

A profile view of the pattern before installation. *(Bevel - left; Colonial - right)*
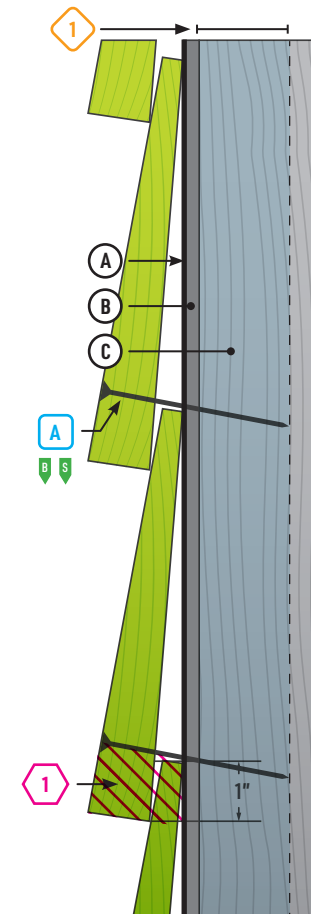
NAILING PATTERNS 6" AND NARROWER

PLAIN

NAILING PATTERNS 8" AND WIDER

PLAIN

CONTENT SOURCE INSTALLATION RECOMMENDATIONS & NAILING PATTERNS PROVIDED BY WWPA.